


## Replacing Your Ceramic Stones

Always handle Ceramic Stones and your Ceramic Heat Plates with care to avoid damages.



### ⚠ WARNING

Ensure that the barbecue is cool and in the "OFF" position before touching any parts.


1. Locate the hitch pin on the Ceramic Heat Plate.
2. Using pliers, grasp and pull out the hitch pin.

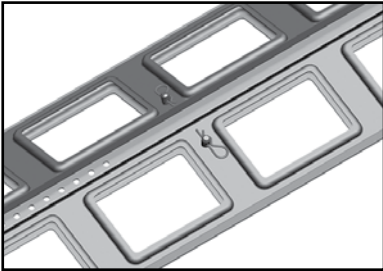

3. Remove the damaged Ceramic Stone and replace it.

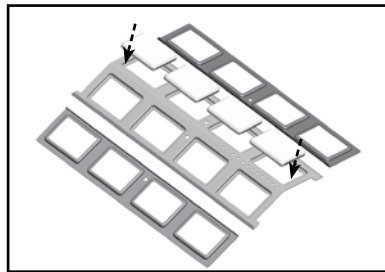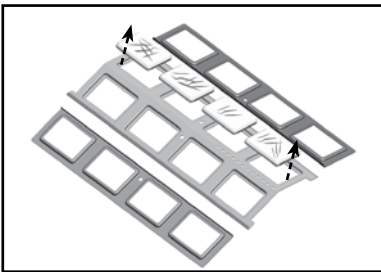

4. Reposition the stainless steel housing and replace hitch pin and connector, to lock in place.

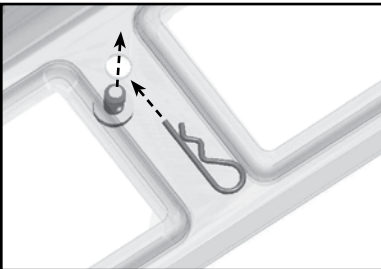

## Seasonal Storage

For full instructions of how to store and protect your barbecue from the elements, follow the information provided on page 15-17 of the Cuisinart® Safety & Care Manual.

Avoid moisture and corrosive damage to parts by always ensuring that your barbecue is stored clean, covered and in a dry environment. If storing outdoors, it is recommended that a barbecue cover is secured properly to the barbecue to protect all surfaces. All internal components should be removed and stored clean, dry, and indoors.

If you have any questions, or require additional information, please visit us online [www.cuisinartbbqs.com](http://www.cuisinartbbqs.com) or contact **Cuisinart® Barbecues Customer Care** at **1-800-309-3452**.

For more information  
please visit us online at [www.cuisinartbbqs.com](http://www.cuisinartbbqs.com)

Join the conversation

