


Cuisinart®

CARE & SAFETY INSTRUCTIONS

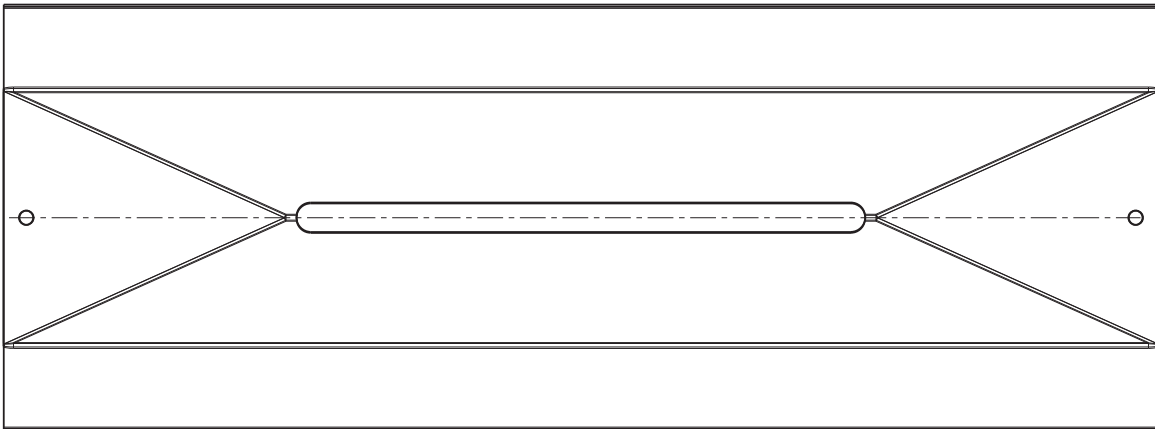

Heat Distribution Plate

85-1976 (G512-0079-02)

EXACT FIT FOR CUISINART® GOURMET MODELS:

85-3032-4 (G51213), 85-3033-2 (G51214), 85-3034-0(G51215), 85-3035-8 (G51216),
85-3032-4 (G51217), 85-3033-2 (G51218), 85-3034-0(G51219), 85-3035-8 (G51220)

READ AND SAVE MANUAL FOR FUTURE REFERENCE.

The Cuisinart® Gourmet Heat Distribution Plate is designed and intended for use with Cuisinart® Gourmet Barbecues only. This product will replace the original heat distribution plate sold with your Cuisinart® Gourmet Barbecue.

CARE AND MAINTENANCE

▲ ATTENTION

- Move grill to an open outdoor area prior to removing old heat plates and installing your new replacement heat plates
- Ensure grill is cool before proceeding. Turn grill control knob(s) off and gas supply off.
- Lift BBQ Lid to expose your BBQ's cooking surface.
- Remove your cooking grates.
- Remove your damaged heat distribution plate and replace with your NEW heat distribution plate.
- Ensure that your heat plates are seated directly over your burner and under your cooking grates.

Your New Cuisinart® Heat Distribution Plate will serve to:

- Protect your burner system from salts, fats and other cooking contaminants that cause blockages, safety issues and pre-mature deterioration.
- Distribute heat for even cooking results.
- Eliminate the need for cooking radiants such as Lava Rocks and Ceramic Briquettes.
- Reduce flare ups.

For proper maintenance:

- Always perform regular maintenance on your heat plates to remove all debris. Do not allow fats, salty and acidic drippings from marinades to accumulate on your heat plates.
- Remove and clean heat plates every other time you BBQ or more frequently if cooking for a large group of people.
- Using a grill brush, brush away any buildup from heat plates. Clean away all remaining debris with mild soap and warm water. Dry thoroughly.
- If your BBQ is being stored outdoors you should clean, remove, and store your heat plates along with your cooking grates, burners, and igniter battery indoors.
- Avoid moisture and corrosive agents from settling on the surface. Failure to do all of the above will lead to rapid deterioration of this part. Without removing all heat plates and inspecting them you may not realize the degree of deterioration caused. Following all instructions within this document will ensure a long life for this part and the best performance of your BBQ.

**For more information
please visit us online at www.cuisinartbbqs.com**

Join the conversation



facebook.com/cuisinartbbqs



twitter.com/cuisinartbbqs

Cuisinart® is a registered trademark used under license

© 2016 Trileaf Distributions Trifeuil
